



Parts List

For:

RWG500 Rewinder



PN: 9001130(B)

SATO America, Inc.

**10350A Nations Ford Road
Charlotte, NC 28273**

Main Phone: (704) 644.1650

Technical Support: (704) 644.1660

Technical Support Fax: (704) 644.1661

E-Mail: satosales@satoamerica.com

technicalsupport@satoamerica.com

www.satoamerica.com

© Copyright 2010

SATO America, Inc.

All rights reserved.

BASE ASSEMBLY

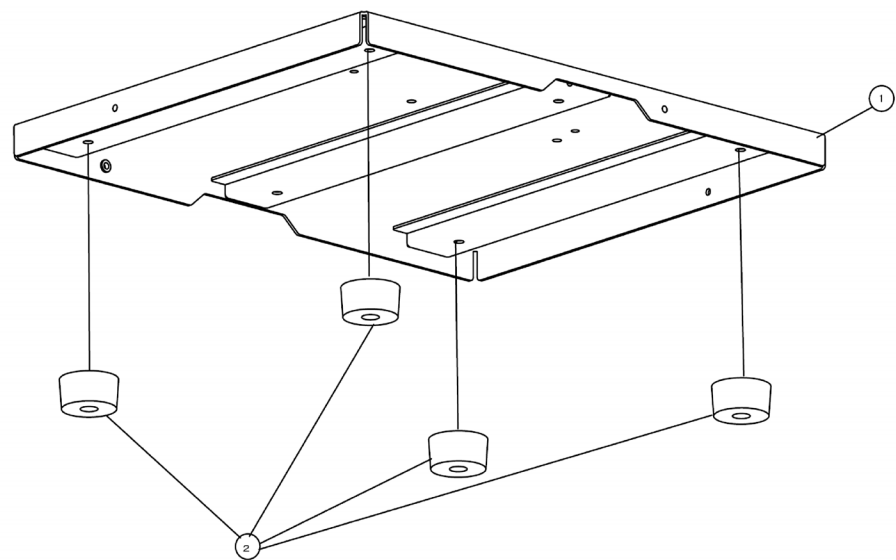


Figure PL1, Base Assembly

BASE ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
1	R05581001	BASE FRAME
2	PT6680100	BOOTS, BLACK RUBBER

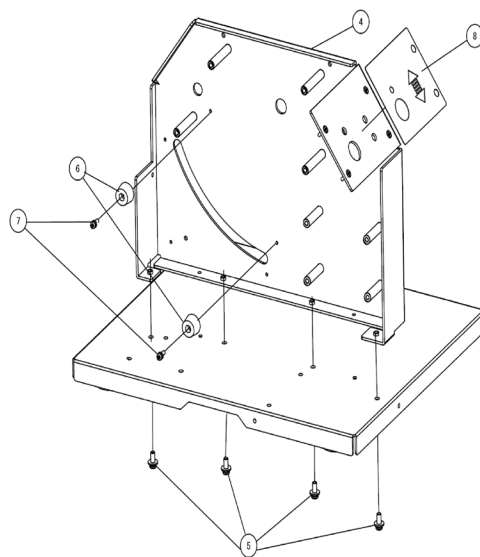


Figure PL2a, Frame Assembly

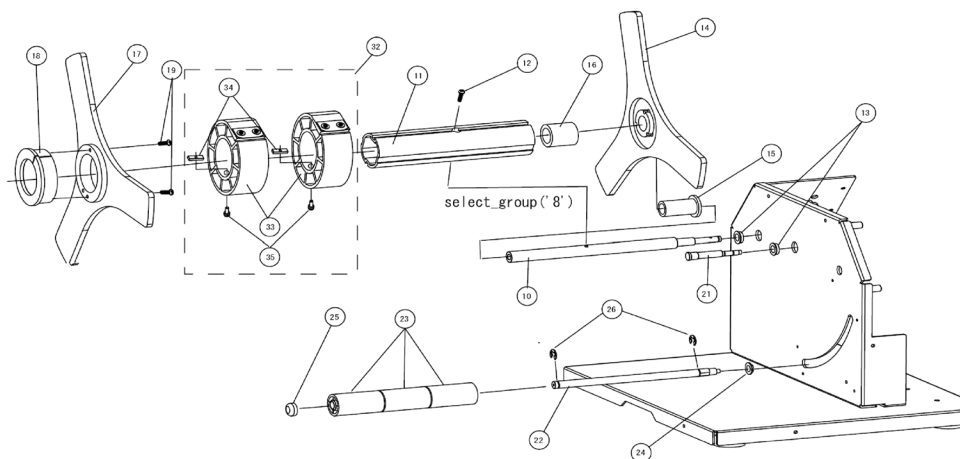


Figure PL2b, Frame Assembly

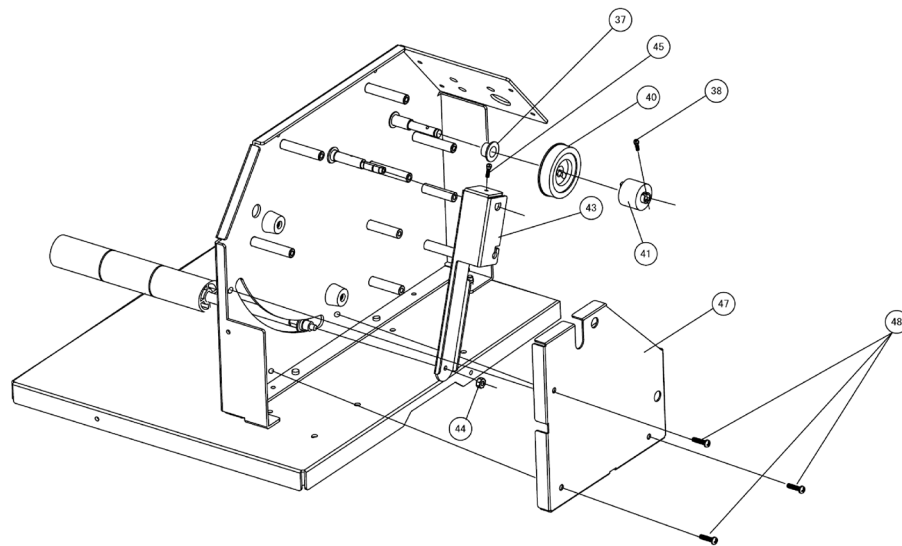


Figure PL2c, Frame Assembly

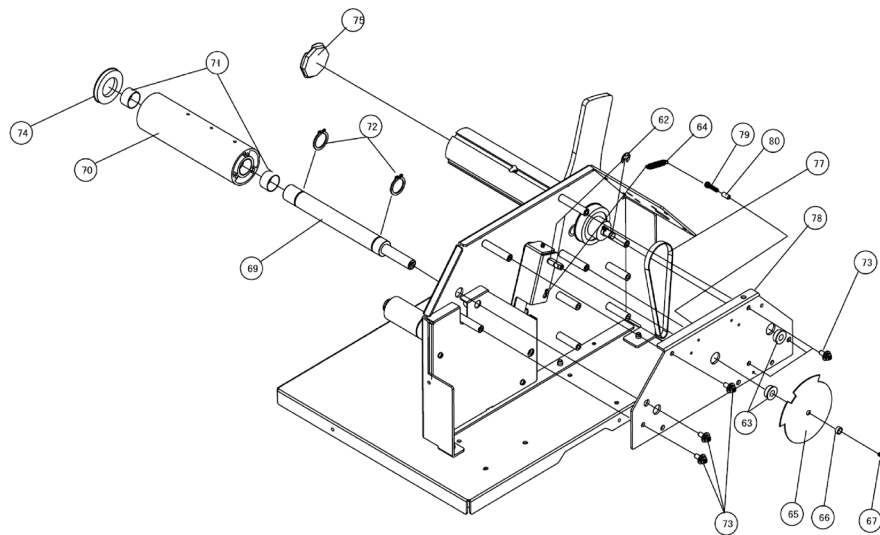


Figure PL2d, Frame Assembly

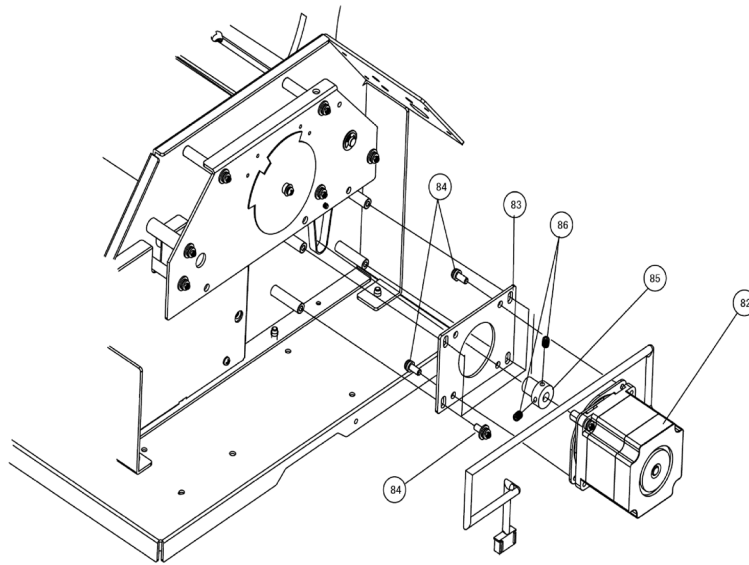


Figure PL2e, Frame Assembly

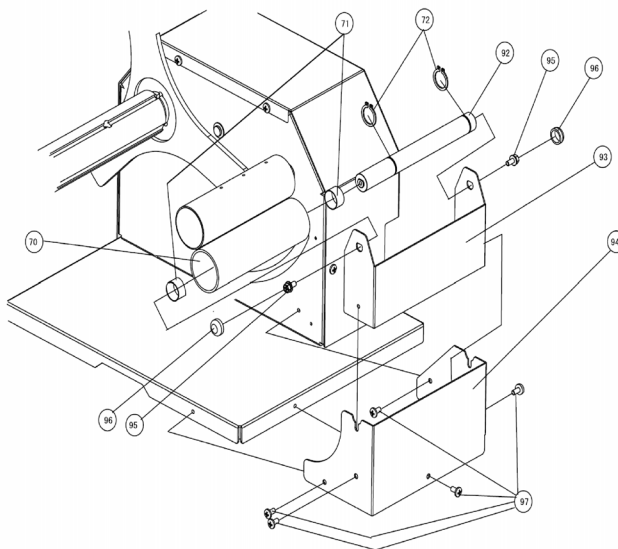


Figure PL2f, Frame Assembly

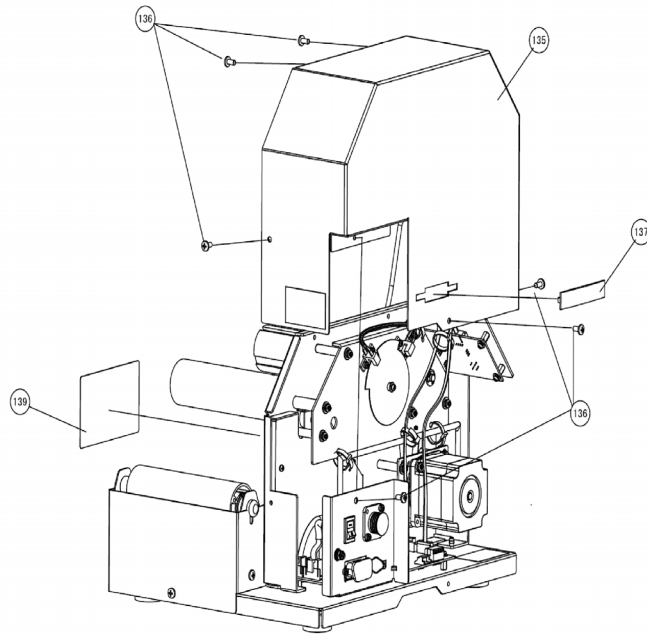


Figure PL2g, Frame Assembly

FRAME ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
4	R05582001	CENTER FRAME ASSEMBLY
5	MD4400822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
6	PT6700200	SPACER
7	MD3300822	PAN HEAD SCREW W/SPRING WASHER & NARROW FLAT WASHER
8	P13558000	PANEL BOARD SHEET
10	P12761000	REWIND SHAFT
11	P00097100	REWIND CORE
12	MD3301022	PAN HEAD SCREW W/SPRING WASHER & NARROW FLAT WASHER
13	PT1112080	BALL BEARING
14	P14049000	STOPPER PLATE (B)
15	P13284001	REWIND CORE COLLAR
16	P13888001	COLLAR GUIDE
17	PE1761320	STOPPER PLATE (A)
18	PE1760820	GUIDE BOSS
19	MH0301221	PAN HEAD P-TIGHT SCREW
21	P12770001	SHAFT (ARM 1)
22	P12768001	SHAFT (ARM)
23	PB3010110	GUIDE ROLLER
24	PT2107050	BUSHING
25	P11150000	SCREW CAP
26	ND0060030	SNAP RING, TYPE E
32	R05951000	GUIDE CORE ASSEMBLY, 3 INCH
33	PR7693600	GUIDE CORE SET, 3 INCH
34	P13285000	CORE COLLAR, 3 INCH
35	MD3301022	PAN HEAD SCREW W/SPRING WASHER & NARROW FLAT WASHER
37	P04532000	BUSHING
38	MA0201022	PAN HEAD SCREW
40	P13282000	PULLEY, 60
41	P14518000	TORQUE LIMITER
43	P12750001	ARM
44	MT1400722	HEX NUT
45	MA0201022	PAN HEAD SCREW
47	P13286001	ARM GUIDE
48	MD4301422	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
62	ND0050030	SNAP RING, TYPE E
63	PT1112060	BALL SUPPORTER
64	PC0730100	SPRING, BACK
65	P13140000	FLAG WHEEL, SLIT
66	P13943000	WINDING TYPE SPACER

FRAME ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
67	MD4300822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
69	P12771001	SHAFT, GUIDE
70	PE1760920	BOSS (A)
71	PT2016010	SLEEVE, DRY METAL
72	ND3160024	SNAP RING, TYPE C
73	MD4400822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
74	P14339000	CAP, ROLL
75	P14340000	CAP, REWIND
77	P08439000	TIMING BELT
78	P13296000	GUIDE PLATE
79	MA0301222	PAN HEAD SCREW
80	P13942000	SPACER, WINDING TYPE
82	K00113000	STEPPER MOTOR
83	P12752000	MOTOR PLATE
84	MD4400822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
85	P14637000	MOTOR PULLEY (16), L12
86	MJ1400524	ALLEN SCREW
92	P13288000	SHAFT, GUIDE 1
93	P13290000	UPPER GUIDE BRACKET
94	P13291000	LOWER GUIDE BRACKET
95	M16220000	HEX SCREW
96	P11150000	SCREW CAP
97	MA2400824	BINDING HEAD SCREW, M4x8, BLACK
99	P12772000	CONNECTOR PLATE
135	P13287001	COVER
136	MA2400824	BINDING HEAD SCREW, M4x8, BLACK
137	PE6740300	DIP SWITCH COVER
139	Q01127000	STICKER, "ROUTE"

MAIN CIRCUIT BOARD ASSEMBLY

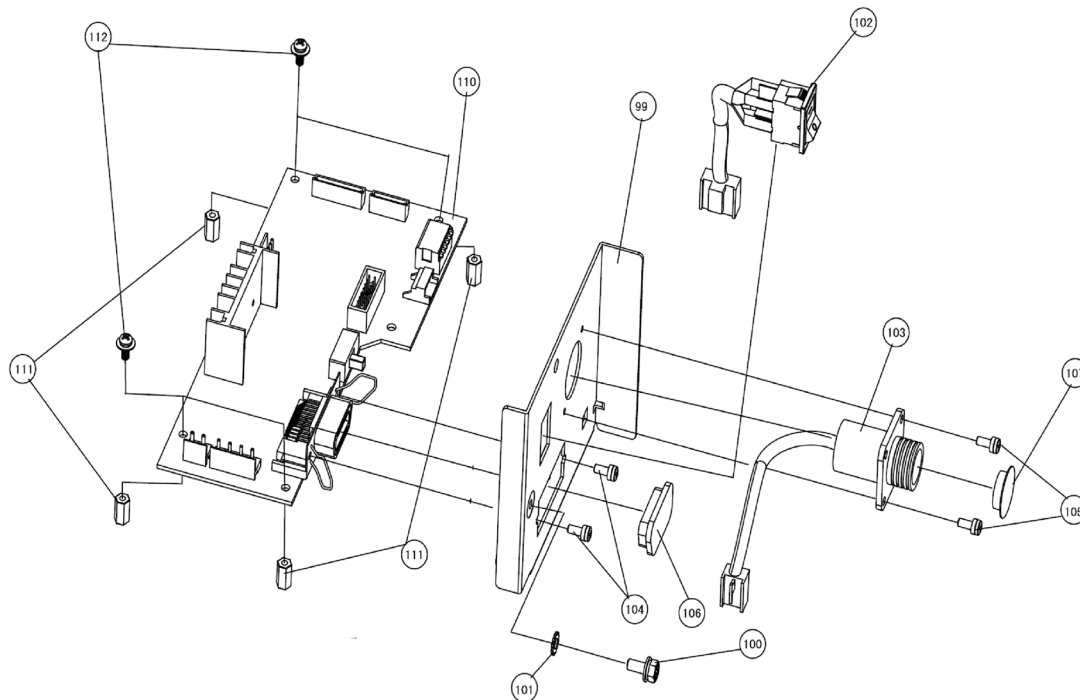


Figure PL3, Main Circuit Board Assembly

MAIN CIRCUIT BOARD ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
99	P12772000	CONNECTOR PLATE
100	M16220000	HEX SCREW
101	NB2040022	TOOTHED LOCK WASHER, 2TW4
102	R05902000	POWER SWITCH ASSEMBLY
103	R06012000	ADAPTER CONNECTOR ASSEMBLY
104	MA0301222	PAN HEAD SCREW
105	MD4300822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
106	JG900411A	CAP
107	P14083000	DUST CAP
110	R05891000	MAIN CIRCUIT BOARD ASSEMBLY
111	PT9800800	SPACER
112	MD4300822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER

PANEL BOARD ASSEMBLY

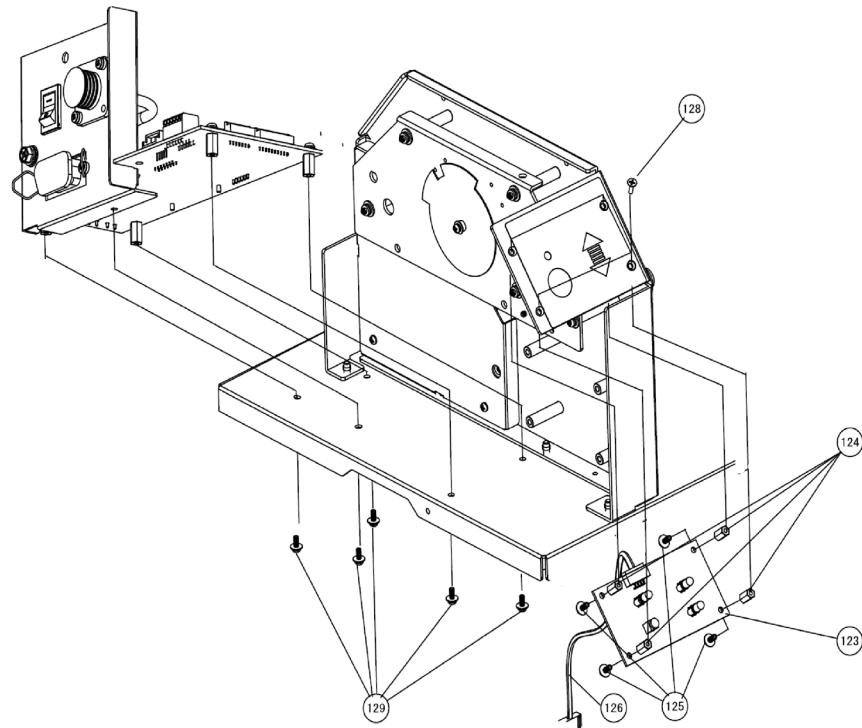


Figure PL4, Panel Board Assembly

PANEL BOARD ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
123	R05893000	PANEL BOARD ASSEMBLY
124	PT9800800	SPACER
125	MD4300822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
126	R05905000	PANEL BOARD CABLE ASSEMBLY
128	MA1300622	FLAT HEAD SCREW
129	MD4300822	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER

SENSOR ASSEMBLY

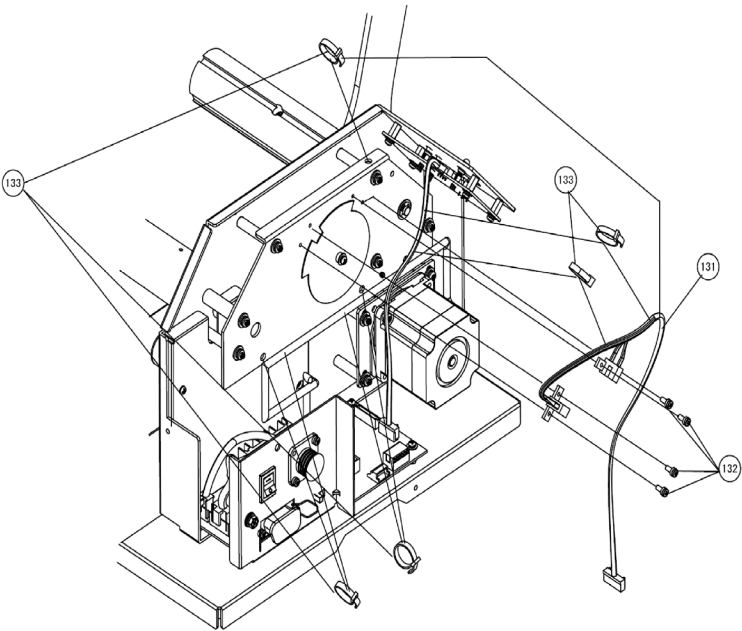


Figure PL5, Sensor Assembly

SENSOR ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
131	R05903000	SENSOR HARNESS ASSEMBLY
132	MD3301022	PAN HEAD SCREW W/SPRING WASHER & NARROW FLAT WASHER
133	JG100011A	CABLE STRAP (TIE WRAP)

JOINT ASSEMBLY

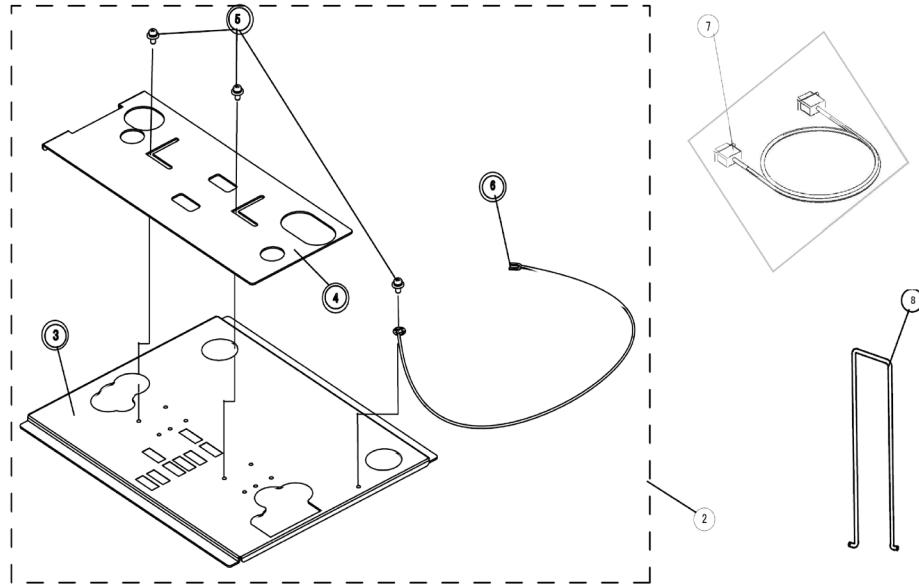


Figure PL6, Joint Assembly

JOINT ASSEMBLY		
ITEM	PART NUMBER	PART DESCRIPTION
2	R05984000	JOINT ASSEMBLY
3	P13292001	JOINT PLATE
4	P13295001	JOINT SUB-PLATE (PRO)
5	MD4400622	PAN HEAD SCREW W/SPRING WASHER & WIDE FLAT WASHER
6	R06072000	GROUND CABLE (FG ASSY)
7	R05906000	EXT POWER CABLE
8	PC3690700	CLIP

