



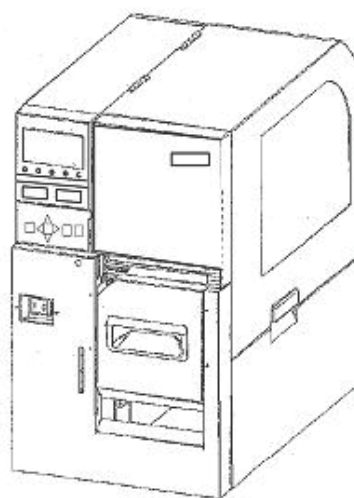

Dispenser Plus Rewinder Kit Parts List

For printer models:

GL408e / GL412e

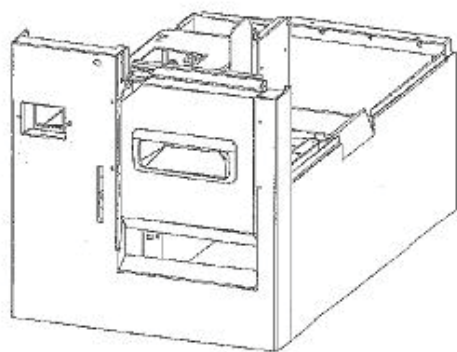

PN: 9001253(A)

SATO America, Inc.

**10350A Nations Ford Road
Charlotte, NC 28273**

Main Phone: (704) 644-1650

Technical Support: (704) 644-1660

Technical Support Fax: (704) 644-1661

E-Mail: satosales@satoamerica.com

www.satoamerica.com

© SATO America, Inc. 2011

All rights reserved.

BASE COVER ASSEMBLY

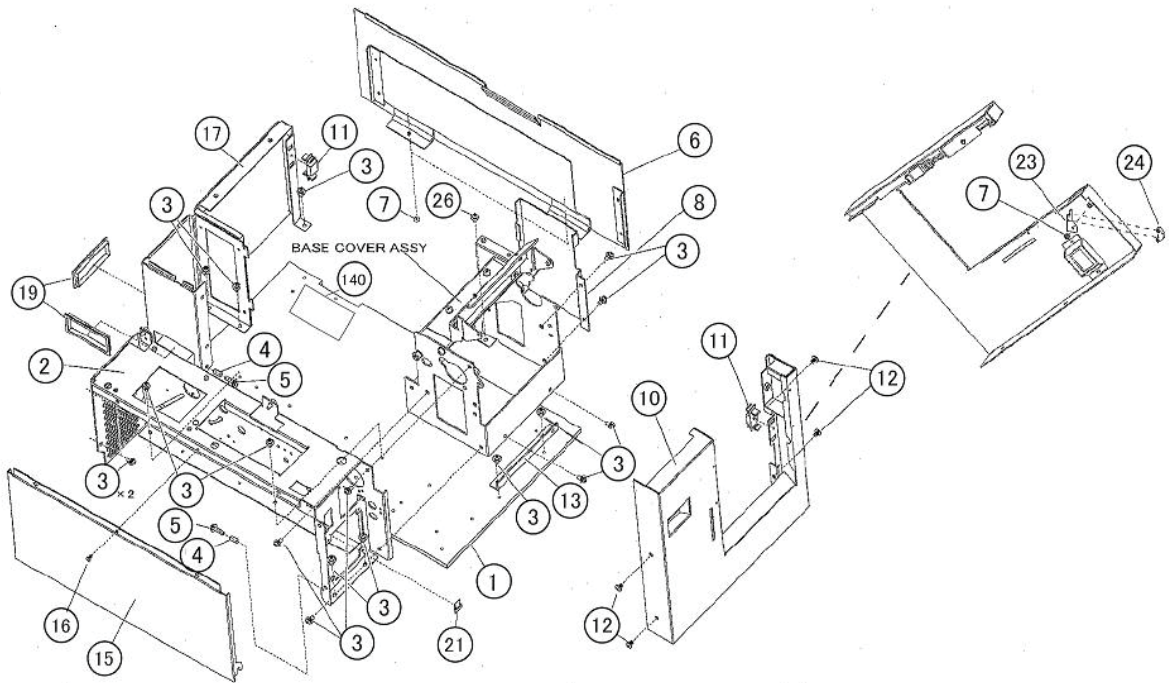


Figure PL1, Base Cover Assembly (1)

BASE COVER ASSEMBLY, CONT'D

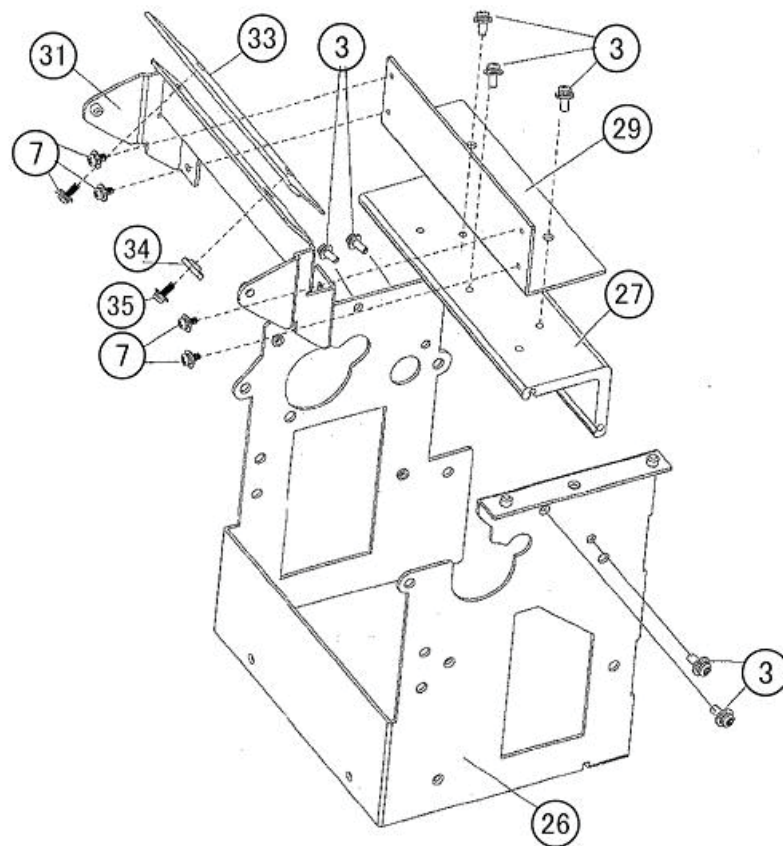


Figure PL2, Base Cover Assembly (2)

BASE COVER ASSEMBLY (1-2)

BASE COVER ASSEMBLY (1-2)		
ITEM	PART NUMBER	PART DESCRIPTION
1	R05005010	BASE PLATE SET
2	R05006020	CENTER FRAME SET
3	M16259000	PAN HEAD SCREW+SW+WL
4	P12120000	SPACER(ROLL BUSH)
5	MD3401622	PAN HEAD SCREW+SW+WS
6	R05007010	OPEN COVER SET
7	MD4300522	PAN HEAD SCREW+SW+WL
8	P12280020	FRONT FRAME COVER
10	R05009020	FRONT COVER SET
11	P12130000	MAGNET CATCH
12	MA2400428	BIND HEAD SCREW
13	P12132010	FRONT BASE B
15	P12133020	L SIDE COVER
16	MA2300622	BIND HEAD SCREW
17	R05011020	REAR FRAME SET
19	P12141000	SQUARE BUSH
21	P12122000	CORD KEEP(K)
23	P12129010	PRIZM SENSOR TP BR
24	F00131000	PRISM-LF
26	R05010020	FRONT BASE A SET
27	P12224000	STAY
29	P12225010	DEMAND BASE BR B
31	R05108010	DEMAND BASE BR A SET
33	P12223000	DEMAND PLATE
34	PL2720100	PL2720100
35	PL2720100	PAN HEAD SCREW+SW+WL
140	Q01911000	ROUTE STICKER

MOTOR ASSEMBLY

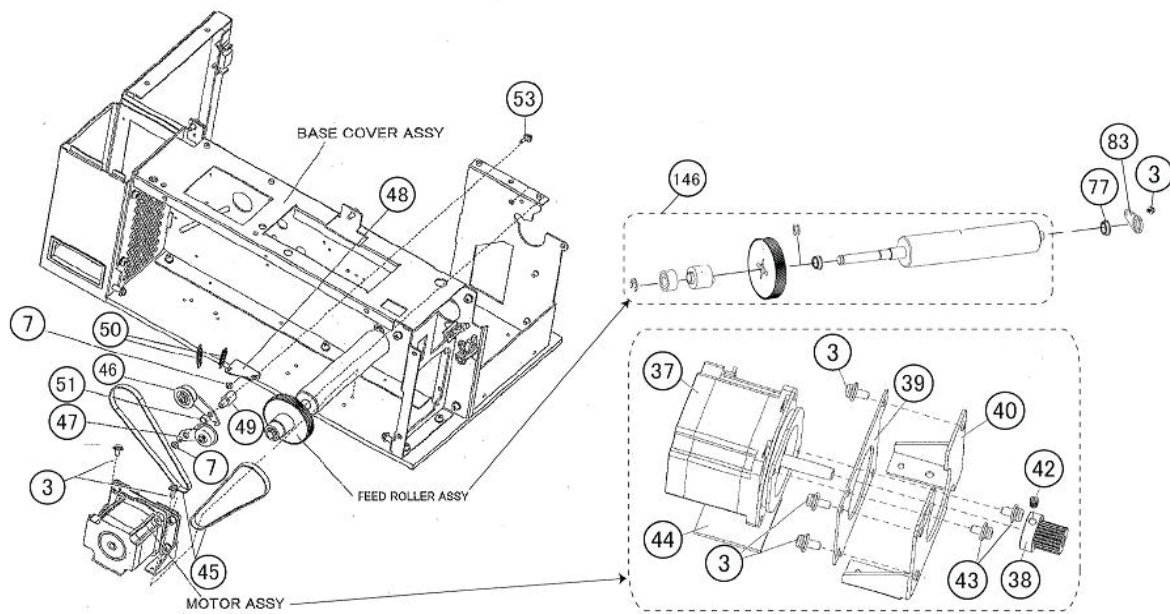


Figure PL3, Motor Assembly (1)

MOTOR ASSEMBLY (1)

MOTOR ASSEMBLY (1)		
ITEM	PART NUMBER	PART DESCRIPTION
3	M16259000	PAN HEAD SCREW+SW+WL
7	MD4300522	PAN HEAD SCREW+SW+WL
37	K00113000	STEPPING MOTER
38	P11157000	MO PULLEY
39	P12163010	MOTOR BR A
40	P12164010	MOTOR BR B
42	MJ1400630	HEXAGON SOCKET HEAD CAP SCREW(W POINT)
43	MD4400822	PAN HEAD SCREW+SW+WL
44	P12165000	HEAT SHEET
45	P12604000	TIMING BELT
46	R05058010	B.TENSION S/A-B
47	R05057010	B.TENSION S/A-A
48	P12228010	TENSION BASE BR
49	P12229000	SHAFT(B.TENSION)
50	P12227000	SPRING(B.TENSION)
51	PE3720300	ROLLER (6.1*8*5.5)
53	MD4400622	PAN HEAD SCREW+SW+WL
63	ND0060030	E RING
68	R05026000	GEAR(0.6*90)SET
76	P12166010	FEED ROLLER
77	PT1112080	BALL BEARING
79	P13261000	TORQUE LIMITER
80	P14225000	ONEWAY CLUTCH
83	PA1680200	SUPPORTER CLAMP
146	R05025000	FEED ROLLER SA

GEAR PULLEY ASSEMBLY

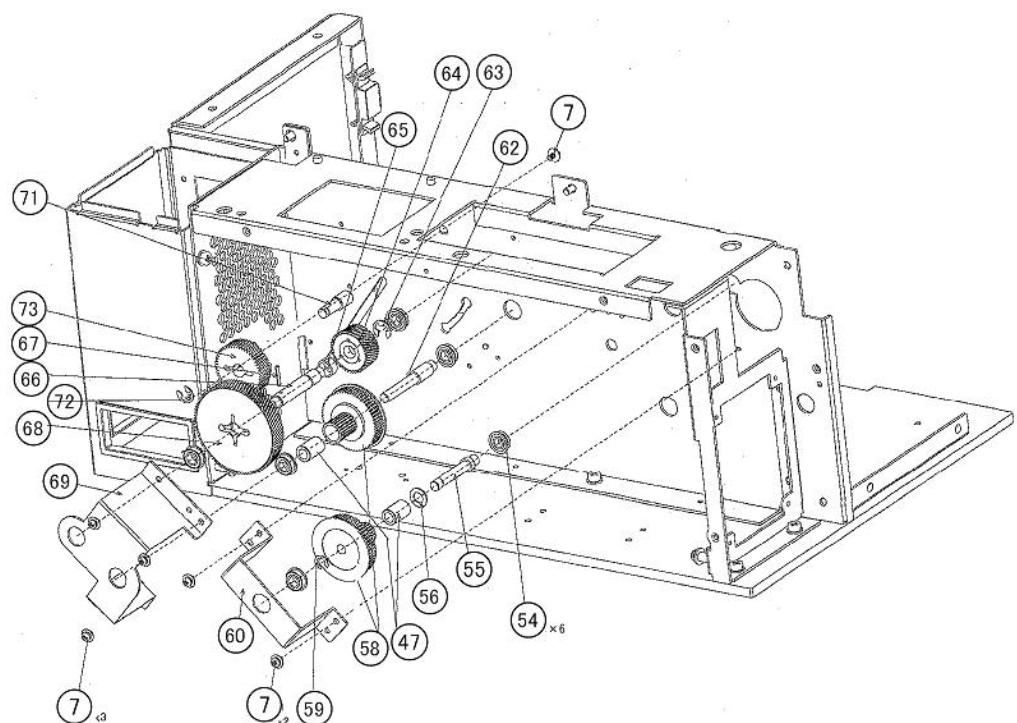


Figure PL4, Gear Pulley Assembly (1)

GEAR PULLEY ASSEMBLY (1)

GEAR PULLEY ASSEMBLY (1)		
ITEM	PART NUMBER	PART DESCRIPTION
7	MD4300522	PAN HEAD SCREW+SW+WL
54	PT1112060	BALL SUPPORTER
55	P12487000	SHAFT(GEAR-P-B)
56	N00011000	WASHER
57	P12488000	COLLAR(6.1-9.8-15)
58	P11159000	GEAR(A)
59	ND0040030	E SNAP RING
60	P12188010	GEAR FRAME A
62	P12187000	SHAFT(GEAR-P-A)
63	ND0060030	E RING
64	R05038000	ONE-WAY GEAR SET
65	P12963000	P12963000
66	P12199010	SHAFT(O.W-GEAR)
67	NG3021230	SPRING PIN
68	R05026000	GEAR(0.6*90)SET
69	P12189010	GEAR FRAME B
71	P12191000	SHAFT(IDLE)
72	ND0050030	E SNAP RING
73	R05187000	GEAR(0.6*50)SET

REWIND ROLLER ASSEMBLY

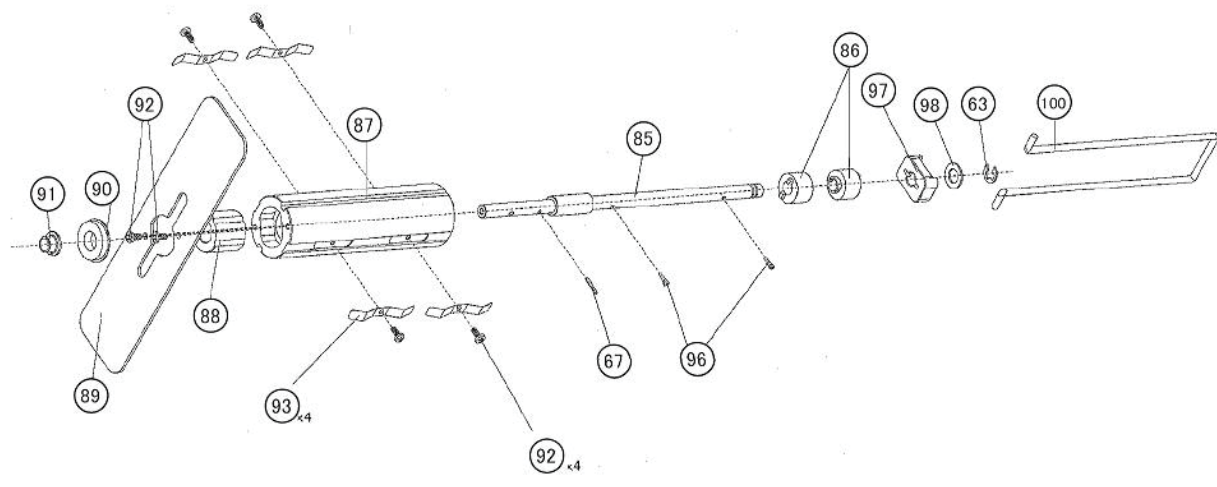


Figure PL5, Rewind Roller Assembly (1)

REWIND ROLLER ASSEMBLY, CONT'D

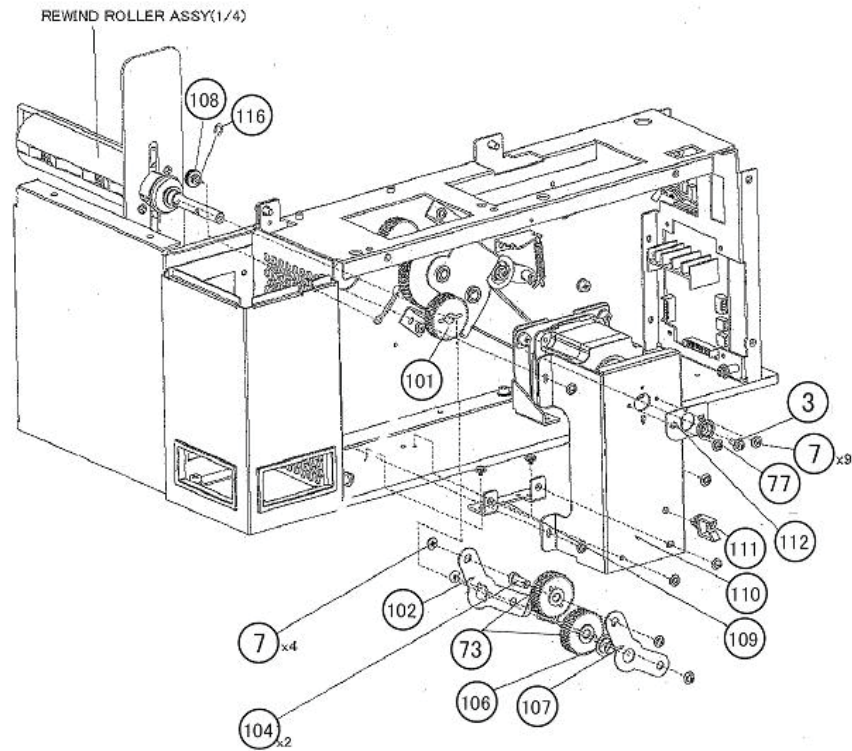


Figure PL6, Rewind Roller Assembly (2)

REWIND ROLLER ASSEMBLY (1-2)

REWIND ROLLER ASSEMBLY (1-2)		
ITEM	PART NUMBER	PART DESCRIPTION
3	M16259000	PAN HEAD SCREW+SW+WL
7	MD4300522	PAN HEAD SCREW+SW+WL
63	ND0060030	E RING
67	NG3021230	SPRING PIN
73	R05187000	GEAR(0.6*50)SET
77	PT1112080	BALL BEARING
85	P12202010	SHAFT(REWIND)
86	P00180000	TORQUE LIMITER
87	P12204000	REWIND CORE-A
88	P12206000	REWIND CORE-C
89	P12203000	GUIDE PLATE
90	PT1124120	BEARING
91	P01475000	BUSH
92	M16221000	BIND HEAD P TIGHT SCREW
93	PA4690900	SPRING
96	MA0200822	PAN HEAD SCREW
97	P12205010	REWIND CORE-B
98	N00008000	PLAIN WASHER
100	P13039010	REWIND CLIP
101	P12190000	GEAR(0.6*50)
102	P12193010	GEAR CHANGE BR A
104	P12192000	SHAFT(CHANGE GEAR)
106	PT2108006	BUSHING
107	P12194010	GEAR CHANGE BR B
108	P14226000	KNOB SCREW A
109	P00165010	BASE JOINT BR.
110	P12208010	REWIND BASE BR
111	P11523000	WIRE SADDLE
112	PA1731000	ADJUST PLATE
116	ND0015030	PB3 Z E-RING (1.5)

FRONT OPEN ASSEMBLY

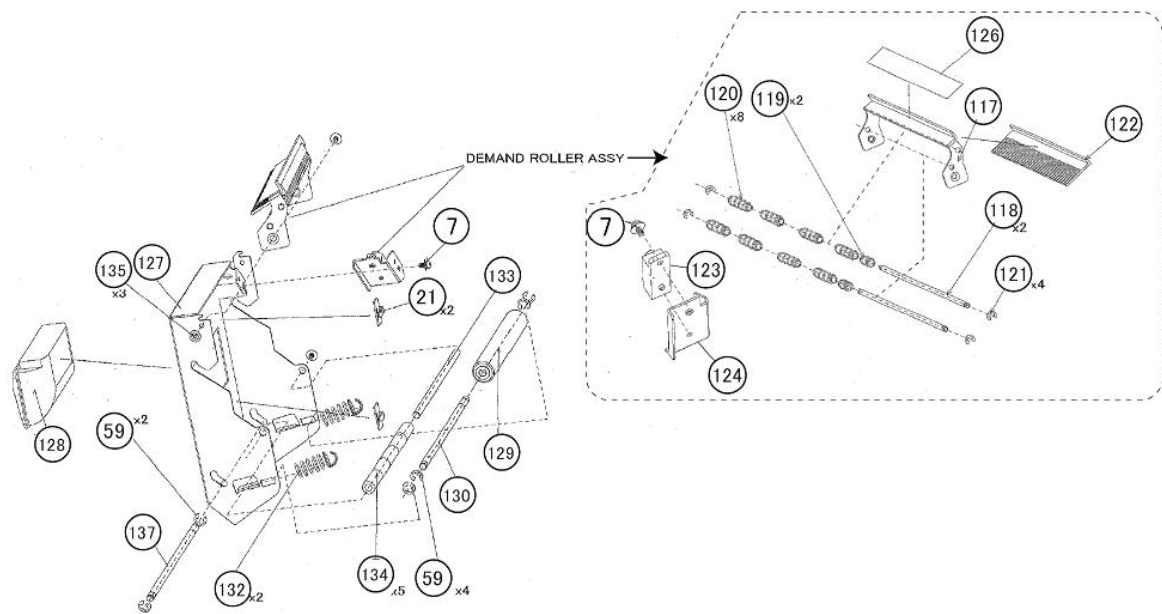


Figure PL7, Front Open Assembly (1)

FRONT OPEN ASSEMBLY, CONT'D

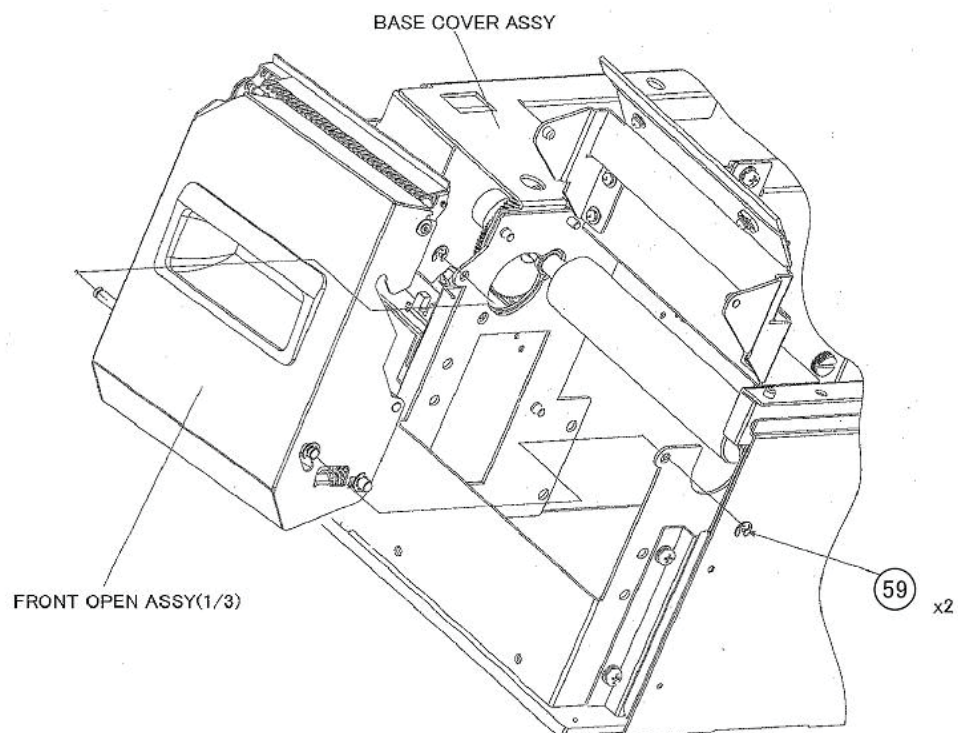


Figure PL8, Front Open Assembly (2)

FRONT OPEN ASSEMBLY (1-2)

FRONT OPEN ASSEMBLY (1-2)		
ITEM	PART NUMBER	PART DESCRIPTION
7	MD4300522	PAN HEAD SCREW+SW+WL
21	P12122000	CORD KEEP(K)
59	ND0040030	E SNAP RING
117	P13149000	DEMAND ROLLER BR
118	P12211010	SHAFT(DEMAND ROLLER)
119	PV0A20000	DEMAND ROLLER(B)
120	PE1A20000	DEMAND ROLLER(B)
121	ND0020030	E SNAP RING
122	P11949000	ANTI STATIC SHEET
123	F00091000	PHOTO MICRO SENSOR-LF
124	P12214010	SENSOR BOTTOM BR
126	P15215001	L SUPPORT SHEET
127	R05051010	D.OPEN COVER SET
128	P12220000	PLASTIC EMBEDDED PULLS
129	R05052010	PRESSURE ROLLER SA
130	P12212000	SHAFT(PRESSURE)
132	P12213010	SPRING(PRESSURE)
133	P12210000	SHAFT(TURN R-A)
134	PM0336700	SEAL LABEL GUIDE ROLLER
135	MJ9300622	THIN HEAD SCREW
137	P12135000	SHAFT(TURN R-B)

PCB CABLE ASSEMBLY

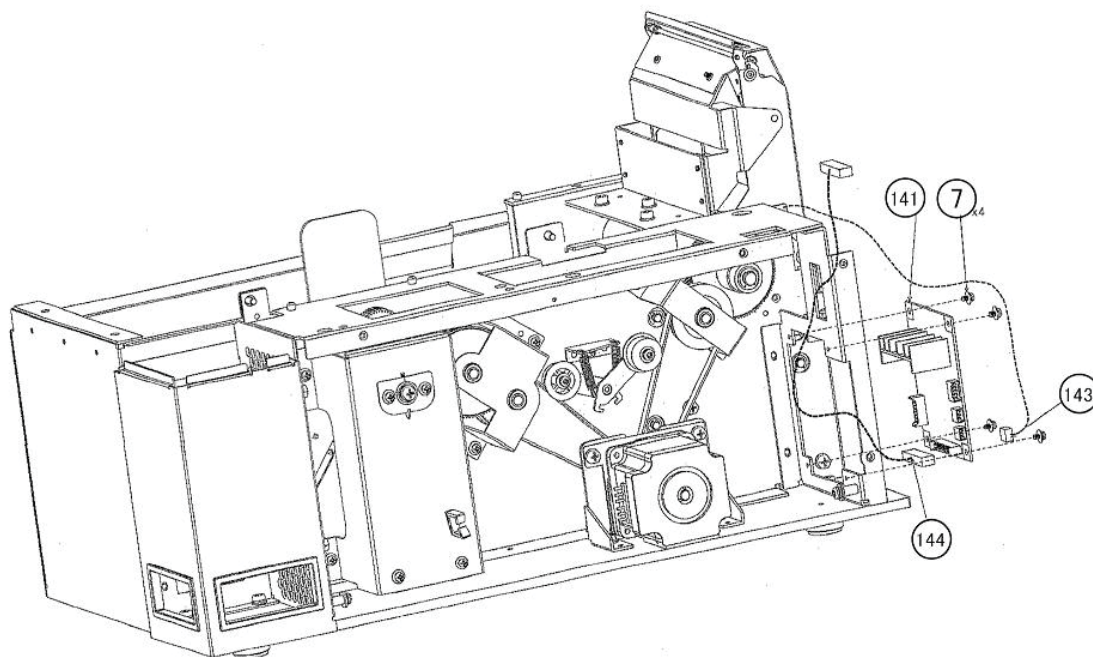


Figure PL9, PCB Cable Assembly (1)

PCB CABLE ASSEMBLY

PCB CABLE ASSEMBLY (1)		
ITEM	PART NUMBER	PART DESCRIPTION
7	MD4300522	PAN HEAD SCREW+SW+WL
141	R04740000	REWINDER PCB SET-LF
143	R04723010	RW DISPENSER CABLE SET-LF
144	R04724010	RW OPTION CABLE SET-LF

ATTACHMENT ASSEMBLY

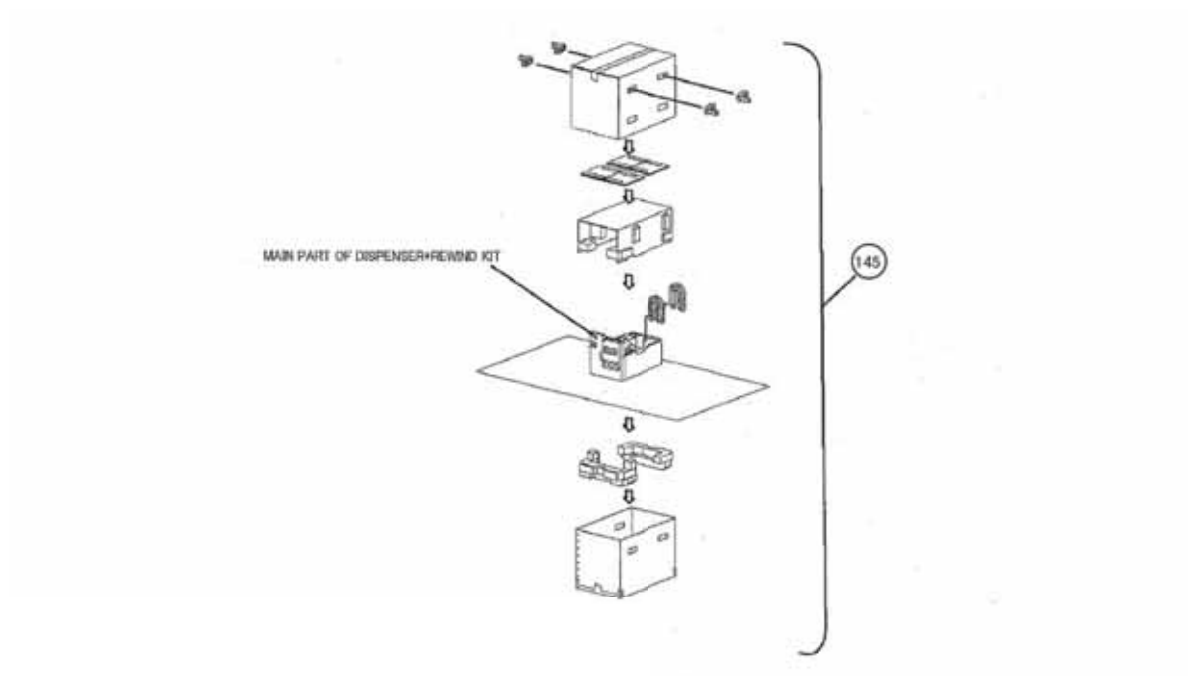


Figure PL10, Attachment Assembly (1)

ATTACHMENT ASSEMBLY

ATTACHMENT ASSEMBLY (1)		
ITEM	PART NUMBER	PART DESCRIPTION
145	R05572002	D PACKING SET M

